

3RN-4L

WHITE + 3RN

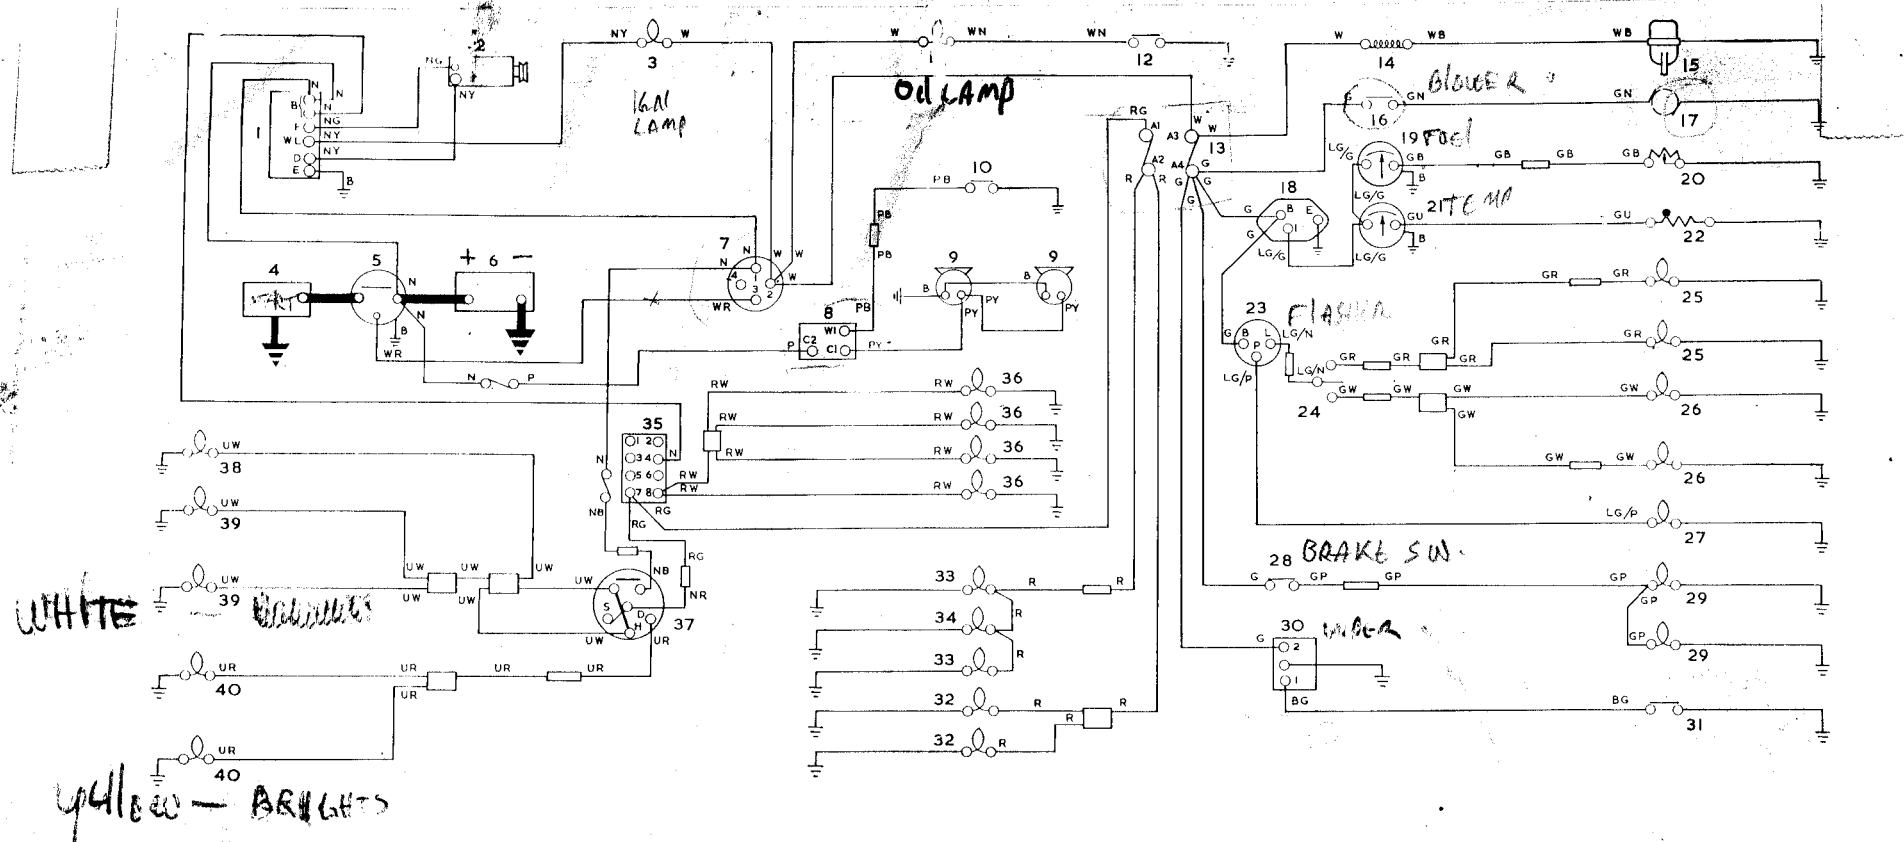


Fig. 10. 15. THE WIRING DIAGRAM FOR THE SPITFIRE 4

- 1 Control box. 2 Generator. 3 Ignition warning lamp. 4 Starter motor. 5 Starter solenoid. 6 Battery. 7 Ignition/starter switch. 8 Horn fuse. 9 Horns. 10 Horn push. 11 Oil warning lamp. 12 Oil pressure switch. 13 Fuse unit. 14 Ignition coil. 15 Distributor. \*16 Heater blower switch. \*17 Heater blower motor. 18 Voltage stabiliser. 19 Fuel indicator. 20 Fuel tank unit. 21 Temperature indicator. 22 Temperature transmitter. 23 Flasher unit. 24 Turn signal switch. 25 Turn signal lamps, left-hand side. 26 Turn signal lamps, right-hand side. 27 Turn signal monitor. 28 Brake/stop lamp switch. 29 Brake/stop lamps. 30 Windscreen wiper motor. 31 Wiper motor switch. 32 Front parking lamps. 33 Tail lamps. 34 Plate illumination lamps. 35 Master lighting switch. 36 Instrument illumination. 37 Steering column light switch. 38 Main beam warning lamp. 39 Headlamp main beams. 40 Headlamp dipped beams.

\*SPECIAL ACCESSORY

CABLE COLOUR CODE

B Black. D Dark. G Green. K Pink. L Light. M Medium. N Brown. P Purple. R Red. S Slate. U Blue. W White. Y Yellow.

IGN SW

N =

3RN-4L  
WHITE + 3RN  
OIL LAMP  
BLU  
WHITE  
YELLOW - BRIGHTS

FLASHER - BLUE + WHITE

WIPER - BLUE + RED